



TEIGSCHABER
DOUGH SCRAPER · DEEGSCHRAPER



🛒	cm	€
ZW04855	11 x 10	4,50



TEIGSCHABER
DOUGH SCRAPER · DEEGSCHRAPER



🛒	cm	€
ZW04856	15 x 7,5	4,80



TEIGSCHABER
DOUGH SCRAPER · DEEGSCHRAPER



🛒	cm	€
ZW04861	16 x 10	1,50



ZW04869

BACKPINSEL · PASTRY BRUSH · BAKKWAST



🛒	cm	€
ZW04868	18 x 4	1,80
ZW04869	21 x 4	2,40

Mit Aufhängeöse · With hanging loop · Met ophanglus



ZW04875

BACKPINSEL · PASTRY BRUSH · BAKKWAST



🛒	cm	€
ZW04875	25 x 5	4,20
ZW04876	26 x 7	6,90

Mit Aufhängeöse · With hanging loop · Met ophanglus



ZW04872

BACKPINSEL · PASTRY BRUSH · BAKKWAST



🛒	cm	€
ZW04872	20,5 x 4	2,70
ZW04873	21 x 5,5	3,00
ZW04874	23 x 10	5,70

Mit Epoxydborsten und Aufhängeöse

With epoxy bristles and hanging loop

Met epoxyborstels en ophanglus



BACKPINSEL · PASTRY BRUSH · BAKKWAST



🛒	cm	Ø cm	€
ZW04871	25	2,5	3,75

Mit Epoxydborsten und Aufhängeöse

With epoxy bristles and hanging loop

Met epoxyborstels en ophanglus