



Groenteschaal zonder deksel - r.v.s. 18/10
Vegetable dish without lid - s.s. 18/10

Nr / No	Ø cm	H cm
3518030	16/20	3
3518031	15	deksel/lid
3518032	18/22	4
3518033	17	deksel/lid
3518034	20/25	4,5
3518035	19	deksel/lid
3518036	22/27	4,5
3518037	21	deksel/lid



Groenteschaal zonder deksel - r.v.s. 18/10
Vegetable dish without lid - s.s. 18/10

Nr / No	Ø cm	H cm
3504900	14	
3504901	14	deksel/lid
3504902	16	
3504903	16	deksel/lid
3504904	18	
3504905	18	deksel/lid
3504943	20	
3504944	24	



Groenteschaal zonder deksel - r.v.s. 18/10
Vegetable dish without lid - s.s. 18/10

Nr / No	Ø cm	H cm	Liter
3513992	22	7,5	2,0
3513985	22	10	2,5
3513981	22	deksel/lid	
3513988	24	8	3,0
3513980	24	deksel/lid	
3514098	28	9	4,5



Groenteschaal zonder deksel - r.v.s. 18/10
Vegetable dish without lid - s.s. 18/10

Nr / No	Ø cm	H cm
3518090	14	5
3518096	14	deksel/lid
3518091	16	6
3518097	16	deksel/lid
3518092	18	6,5
3518098	18	deksel/lid
3518093	20	7
3518099	20	deksel/lid
3518094	22	7,5
3518100	22	deksel/lid
3518095	24	8
3518101	24	deksel/lid